

Height-Adjustment Clips for use with Roman Shades



Kit includes: THREE Shade-Height Clips (shown above)

Accessible cords on certain roman shades pose a strangulation hazard to children because a child can pull out one of the height-adjustment cords to form a loop or place his or her neck in the length of the cord between the rings located on the back of the shade. To eliminate this potential hazard, we have removed all cords from our Roman shades.

New Cordless Construction

In the absence of controlling cords, the adjuster clips included with this product will allow you to maintain both shade height and also the elegant cascading pleats so indicative of a roman shade.

NOTE:

There are two or three columns of plastic rings located on the rear of the shade (the side facing the window). The height-adjusting clips are used to capture some or all of these rings in each column to control the effective height of the shade. Once installed, the clips will hold the shade to the desired height and can be removed at anytime to make additional height adjustments.

STEP ONE: *Attaching the New Clips*

Holding the clip as shown, feed the rod portion of the clip into the lowermost ring of one of the columns.



STEP TWO: *Attaching the New Clips*

Continue to move the clip up along the column of rings capturing only the rings adjacent to the horizontal plastic reinforcement stays (every other ring) to achieve the desired shade height. Push each collected ring on to the rod past the hook of the clip to secure it to the clip.



STEP THREE: *Locking the Installed Clips*

Once the shade is raised to the desired height, turn the clip so that the open rod end faces down, as shown in the picture. This will lock the clip in place and ensure that the pleats hold.

Repeat the above steps with the remaining clips on the remaining columns of rings.



Reposition the Shade (Release the Clips)

To reposition the shade, simply unlock each clip by moving it so that the open rod portion points up. Pull open the clip so that the hook allows rings to be released from the clip.

Release some rings or capture additional rings to set the new desired shade height and relock the clip by inverting it as shown in step THREE.



Questions or Concerns:

As always, if you have any questions or concerns regarding the installation of this cord-free clip installation kit, please contact our customer service at 1-800-492-1949 or visit www.potterybarnkids.com.

Thank you!