 


pottery barn kids

RILEY DRESSER

PRE-ASSEMBLY:

- Read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- For your safety and ease, assembly by two adults is recommended.
- Remove all parts and hardware from the box and lay out on a clean, carpeted, or scratch-free work surface. Use care as some parts or hardware may have sharp points or edges.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- The use of power tools for assembly is not recommended. Power tools can damage hardware or split wood.

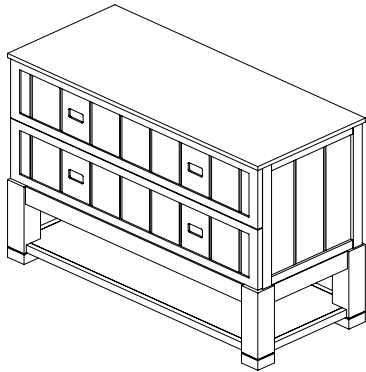

PARTS INCLUDED:

 
(A) Dresser – 1pc

HARDWARE INCLUDED:

(B) Mending Bracket  - 2pcs

(C) Wood Screw 3x12mm  - 4pcs

TOOLS REQUIRED:

 
Philips Screwdriver (Not included) 

PARTS REQUIRED:

Riley Platform Bed (Sold separately)

ASSEMBLY INSTRUCTIONS:

1. To connect the Dresser to a Riley Platform Bed, if desired, align the dresser and bed as shown. Place (2) Mending Bracket (B) over the pre-drilled holes on legs of the Dresser and Lounge Platform Bed, securing with (4) Wood Screws (C).

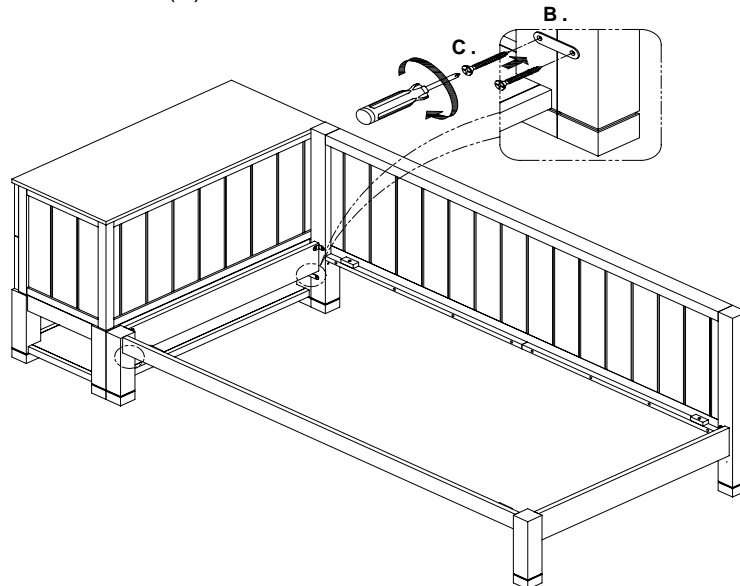

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

Thank you for your purchase.
stores | catalog | www.potterybarnkids.com
USA 1.800.290.8181