
pottery barn kids RILEY TRUNDLE

PRE-ASSEMBLY:

- Read all instructions before beginning assembly. The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- For your safety and ease, assembly by two adults is recommended.
- Remove all parts and hardware from the box and lay out on a clean, carpeted, or scratch-free work surface. Use care as some parts or hardware may have sharp points or edges.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- The use of power tools for assembly is not recommended. Power tools can damage hardware or split wood.

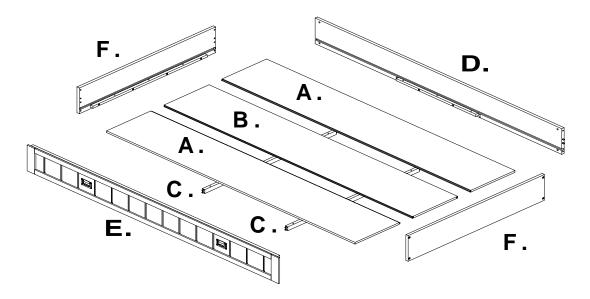

PARTS INCLUDED:

- (A) Left and Right Board (with extra holes) 2pcs Philips Sc
- (B) Center Bottom Board 1pc
- (C) Cross Bar 2pcs
- (D) Long Side Rail 1pc
- (E) Long Side Rail with Handles 1pc
- (F) Short Side Rail 2pcs

HARDWARE INCLUDED:


tra holes) – 2pcs Philips Screwdriver (Not included)

TOOLS REQUIRED:


(G) Allen Key – 1pc	(H) Allen Bolt 1/4"x60mm – 8pcs	(I) Spring Washer – 8pcs
(J) Flat Washer - 8pcs	(K) Barrel Nut – 8pcs	(L) Long Wood Screw 4x30mm - 22pcs
(M) Short Wood Screw 4x13mm – 24pcs	(N) Caster – 6pcs	

ASSEMBLY INSTRUCTIONS:


1. Place the Left and Right Bottom Boards (A) on either side of the Center Bottom Board (B) with the pre-drilled holes facing up, as shown in Figure 1. Attach (2) Cross Bars (C) to the bottom boards by inserting (6) Long Wood Screws (L) into the pre-drilled holes of each cross bar, tightening with a Philips Screwdriver.

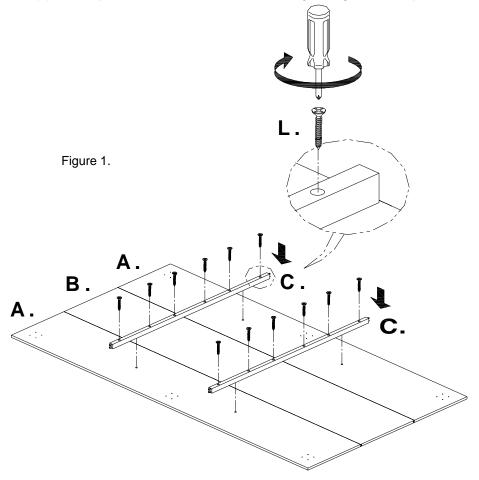


2. Turn assembled base right side up. Insert the wooden dowels on the ends of the Cross Bars (C) into the predrilled holes on the Long Side Rails (D & E), as shown in Figure 2. Press firmly to ensure the Left and Right Bottom Boards sit in the slots of the Long Side Rails (D & E).

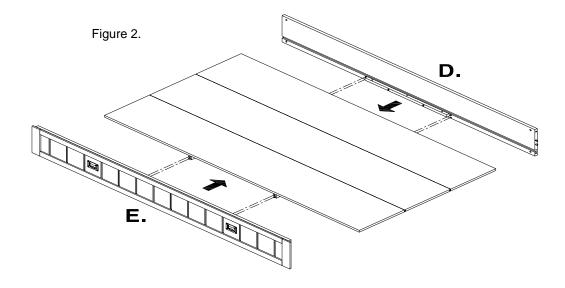

3. Align the predrilled holes on the Short Side Rails (F) to the wooden dowels on ends of the (2) Long Side Rails (D & E). Slide a Spring Washer (I) and a Flat Washer (J) into an Allen Bolt (H). Insert the Bolt into the pre-drilled hole on the Short Side Rail (F). Place Barrel Nut (K) in the corresponding opening on the Long Side Rail and use Allen Key (G) to connect, as shown in Figure 3. Repeat with the remaining (7) bolts. Do not fully tighten until all bolts are in place.

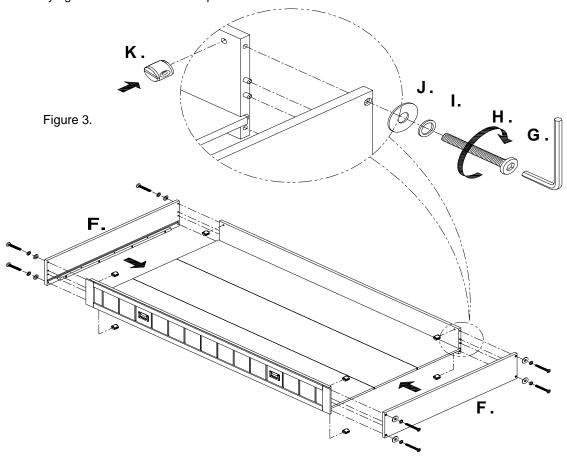


4. Turn trundle upside down. Secure Bottom Boards with the Long/Short Side Rails using the remaining (10) Long Wood Screws (L).

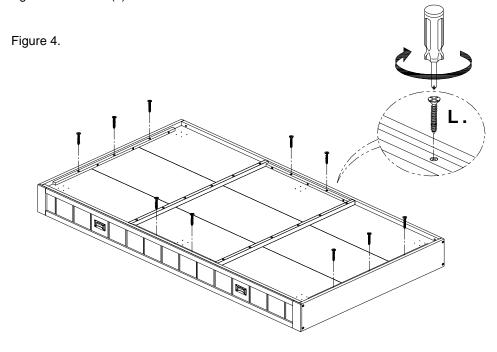

Page 3/4

5. Attach the (6) Casters (N) to pre-drilled holes on the Bottom Boards using (24) Short Wood Screws (M).

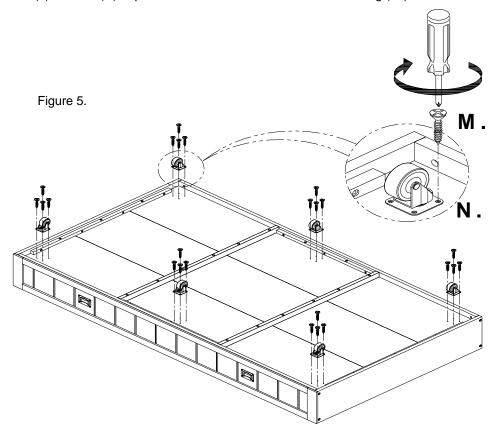

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.