

pottery barn kids


STAR HEADBOARD TWIN

PRE - ASSEMBLY:

- Please read all instructions before beginning assembly.
- For your safety and ease, assembly by two adults is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- The use of power tools during the assembly of this item can cause the hardware to strip or the wood to split. Please proceed with extreme care.
- Adult assembly is required.


PARTS INCLUDED:

- Star Headboard Twin– A

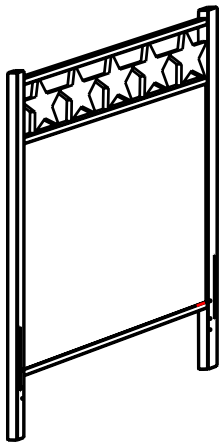


PARTS NOT INCLUDED :


- Metal bed frame - B

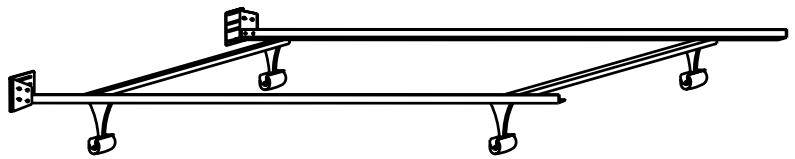

- (2) Side rail of Cameron platform bed twin - C



- Footboard of Cameron platform bed twin - D

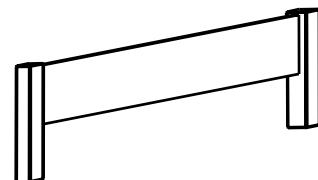

HARDWARE INCLUDED:

- (6) Bolt Ø 6 x 65 – E



- (6) Flat washers Ø 6– F



- (6) Spring washer Ø 6– G



- (6) Nut Ø 6 – H



TOOL REQUIRED :


- Wrench - I (not included)



OPTION 1 : Headboard fixed to Metal bed frame

ASSEMBLY :


1. Hold Headboard (A) upright and tilted slightly towards the faceplates of the Metal bed frame (B) .
2. Align the slot in the faceplates with the pre-drilled holes in the legs of the headboard (A) .
3. Insert Bolt (E) into Flat washer (F), Spring washer (G) and Nut (H), as show .
4. Tighten Nut (H) by using Wrench (I). Periodically tighten all connections .

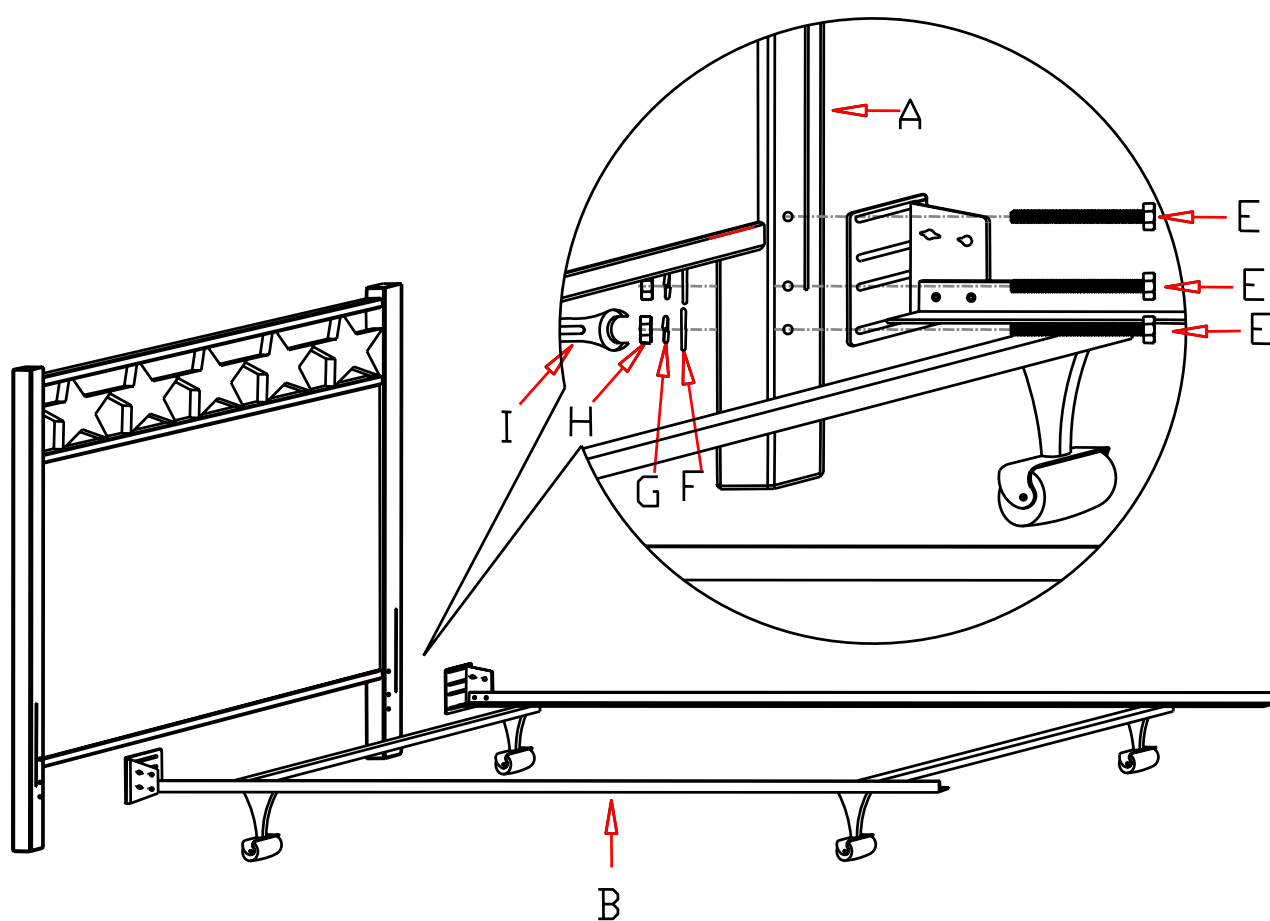

OPTION 2 : Headboard fixed to Cameron platform bed twin .

ASSEMBLY :

1. Hold Headboard (A), Footboard (D) upright and titled slightly towards both ends of the Side rails (C)
2. Attach Side rails to Headboard (A) and Footboard (D) with Metal hook inserted in the Side rails (C) and Metal rods inserted in the legs of Headboard (A) and Footboard (D), as show .

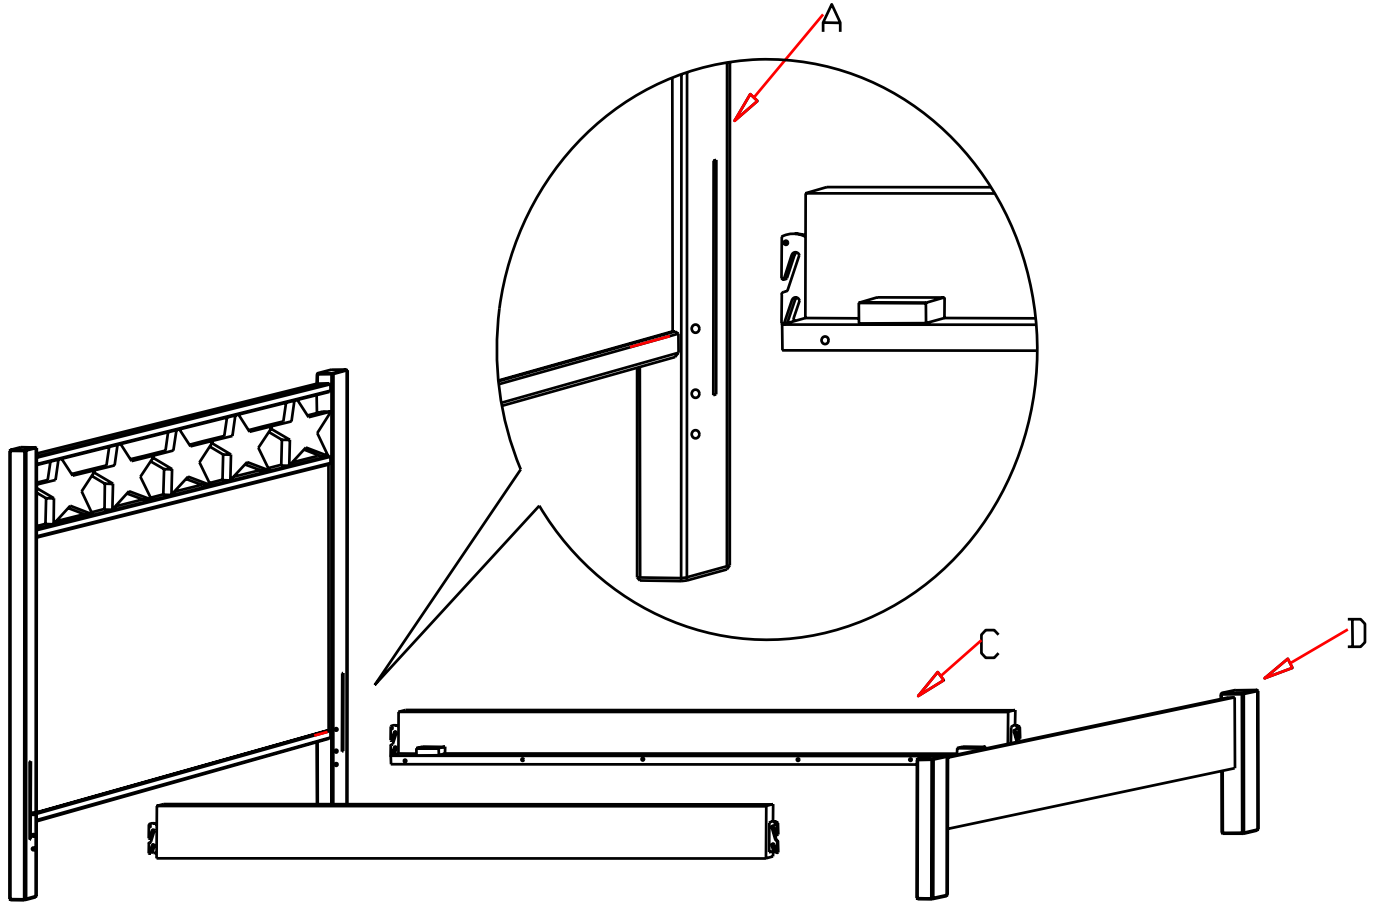

CARE: Dust often with a soft, dry cloth.

Thank you for your purchase
stores | catalog | www.potterybarnkids.com
USA 1.800.290.8181

pottery barn kids


STAR HEADBOARD FULL

PRE - ASSEMBLY:

- Please read all instructions before beginning assembly.
- For your safety and ease, assembly by two adults is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- The use of power tools during the assembly of this item can cause the hardware to strip or the wood to split. Please proceed with extreme care.
- Adult assembly is required.


PARTS INCLUDED:

- Star Headboard full - A

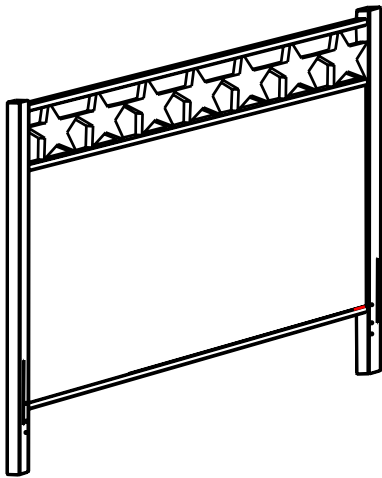


PARTS NOT INCLUDED :


- Metal bed frame - B

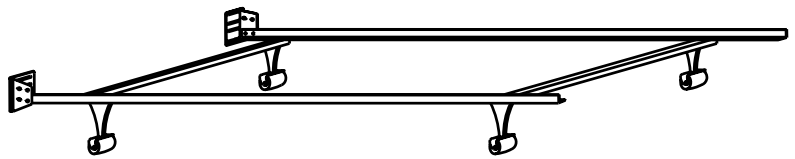

- (2) Side rail of Cameron platform bed full - C



- Footboard of Cameron platform bed full - D

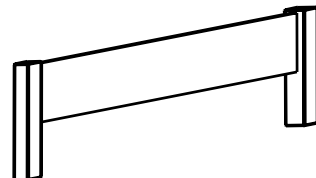

HARDWARE INCLUDED:

- (6) Bolt Ø 6 x 65 – E



- (6) Flat washers Ø 6– F



- (6) Spring washer Ø 6– G




- (6) Nut Ø 6 – H



TOOL REQUIRED :


- Wrench - I (not included)



OPTION 1 : Headboard fixed to Metal bed frame

ASSEMBLY :


1. Hold Headboard (A) upright and tilted slightly towards the faceplates of the Metal bed frame (B) .
2. Align the slot in faceplates with the pre-drilled holes in the legs of the headboard (A) .
3. Insert Bolt (E) into Flat washer (F), Spring washer (G) and Nut (H), as show .
4. Tighten Nut (H) by using Wrench (I) . Periodically tighten all connections .

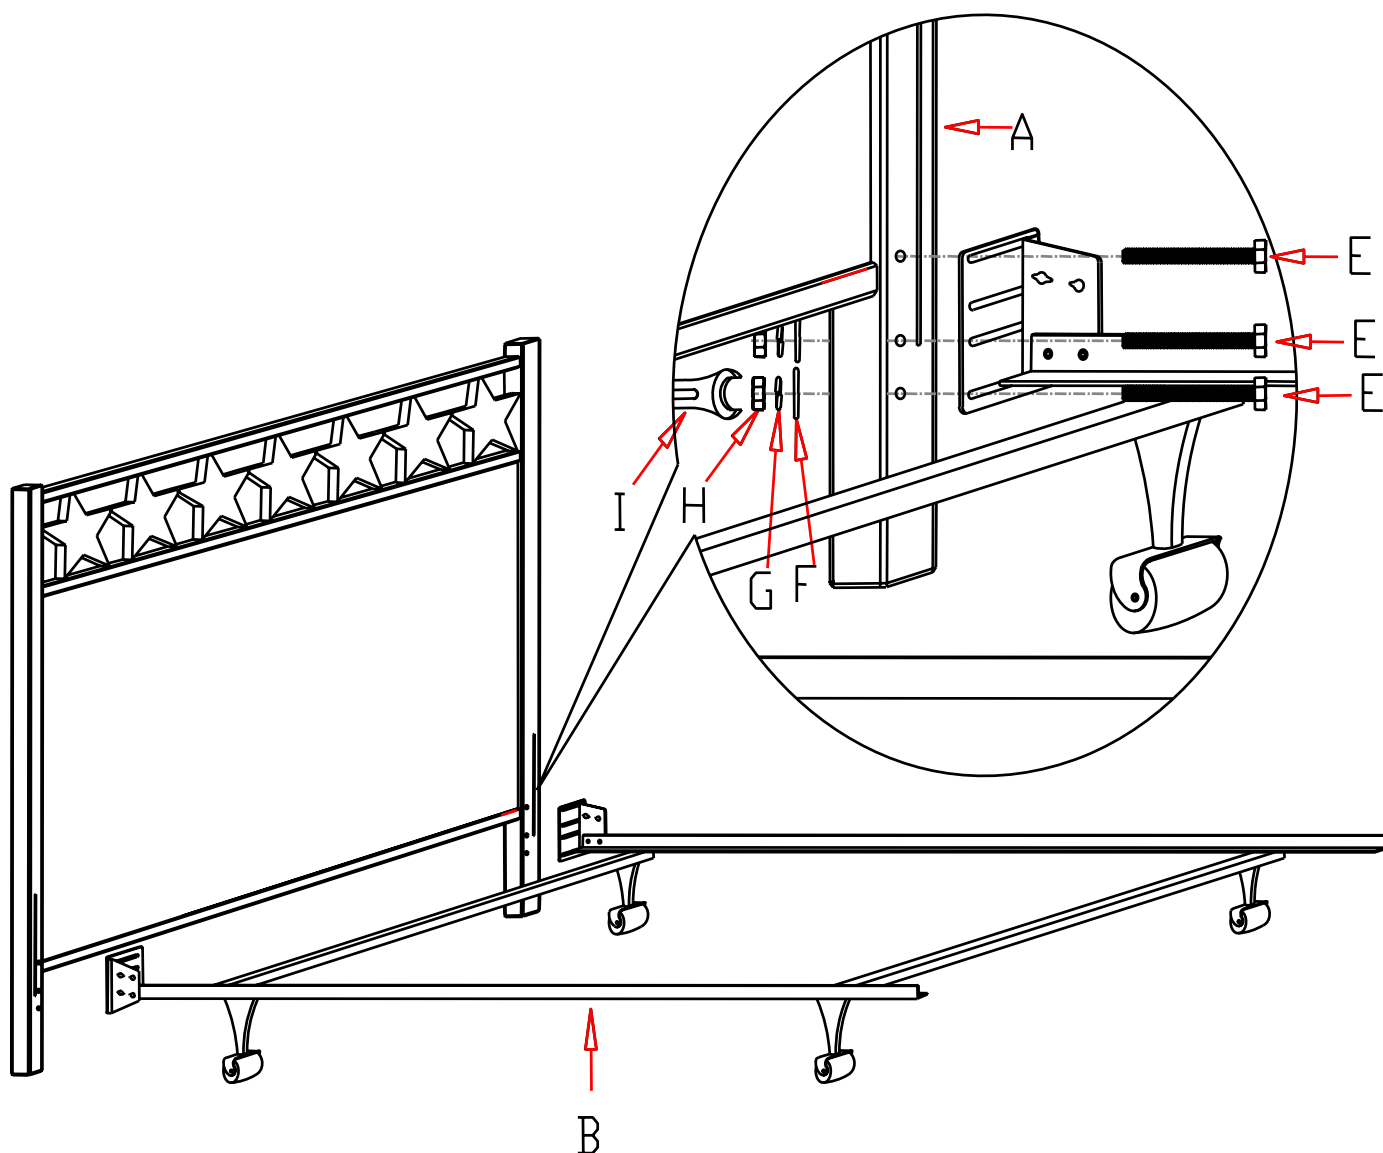

OPTION 2 : Headboard fixed to Cameron platform bed full .

ASSEMBLY :

1. Hold Headboard (A), Footboard (D) upright and titled slightly towards both ends of the Side rails (C)
2. Attach Side rails to Headboard (A) and Footboard (D) with Metal hook inserted in the Side rails (C) and Metal rods inserted in the legs of Headboard (A) and Footboard (D), as show .

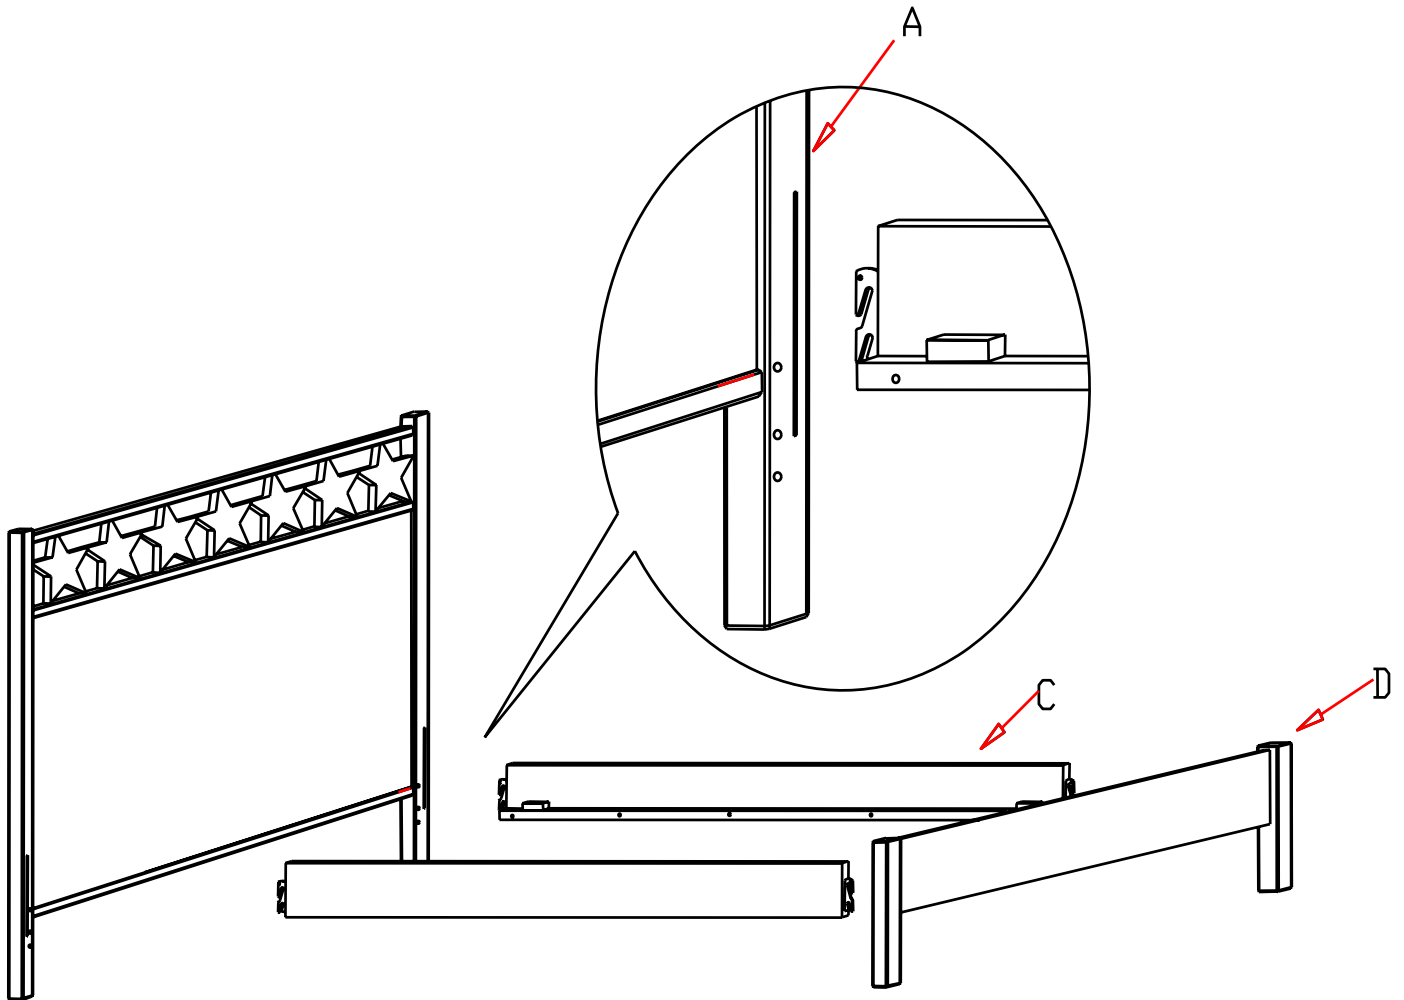

CARE: Dust often with a soft, dry cloth.

Thank you for your purchase
stores | catalog | www.potterybarnkids.com
USA 1.800.290.8181