


pottery barn kids

DEVON BED

CAUTION: Adult assembly required. This item contains small parts that have sharp points and edges in the unassembled state. Adults should take care when unpacking and assembling this item.

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- For ease of assembly two people are recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware. One extra drawer knob is included for your convenience.
- Use caution when using power tools to aid in assembly. Power tools can split wood or strip hardware if not used carefully.

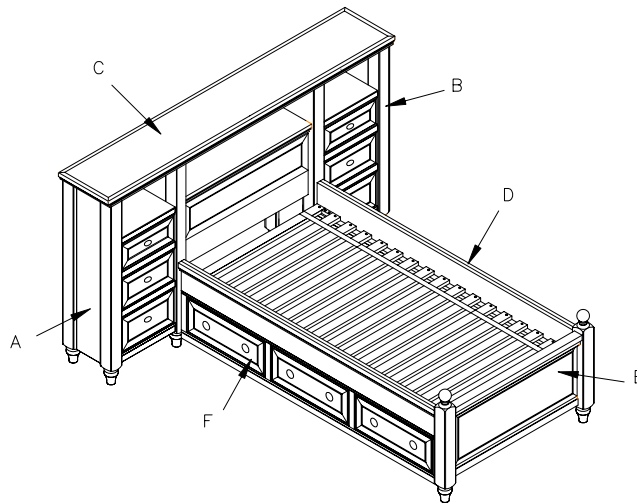

PARTS INCLUDED:


- (A) Right Unit – 1pc
- (A-1) Feet – 4pcs
- (B) Left Unit – 1pc
- (B-1) Feet – 4pcs
- (C) Center Storage Unit – 1pc
- (C-1) Front Panel – 1pc
- (C-2) Center shelf – 1pc
- (C-3) Back Panel – 1pc
- (D) Side Rails and Slats – 2pcs
- (E) Footboard – 1pc
- (E-1) Feet – 2pcs
- (E-2) Headboard panel – 1pc
- (E-3) Slat – 1pc
- (F-4) Finial – 2pcs
- (F) 3 Drawer Component – 1pc

HARDWARE ENCLOSED:

- (G) Allen Key – 1pc
- (H) 5/16" x 30mm Allen Bolt – 16pcs
- (I) 5/16" Spring Washer – 16pcs
- (J) 5/16" Flat Washer – 16pcs
- (K) Wood Screws 5/32" x 30mm – 40pcs


ASSEMBLY INSTRUCTIONS:

1. Carefully lower Right Unit (A) and Left Unit (B) on a soft, scratch-free surface. Thread the 4 feet (A-1 and B-1) into pre-drilled holes in the bottom of Right Unit and Left Unit, as shown. Carefully raise both units upright.

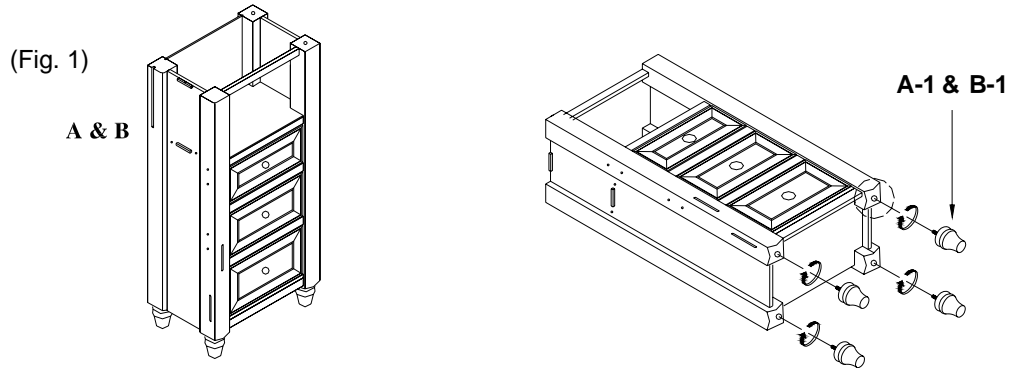


2. Carefully insert the Front panel (C-1) into the Right & Left Units as shown, fastening the connections using Allen Bolts, Flat Washers, and Spring Washers. Hook the Headboard panel (E-2) into the Left Unit. (Fig. 2)

Note: The correct order for the washers to go on the Allen Bolt is: Spring Washer first, Flat Washer second. (Fig. 3)

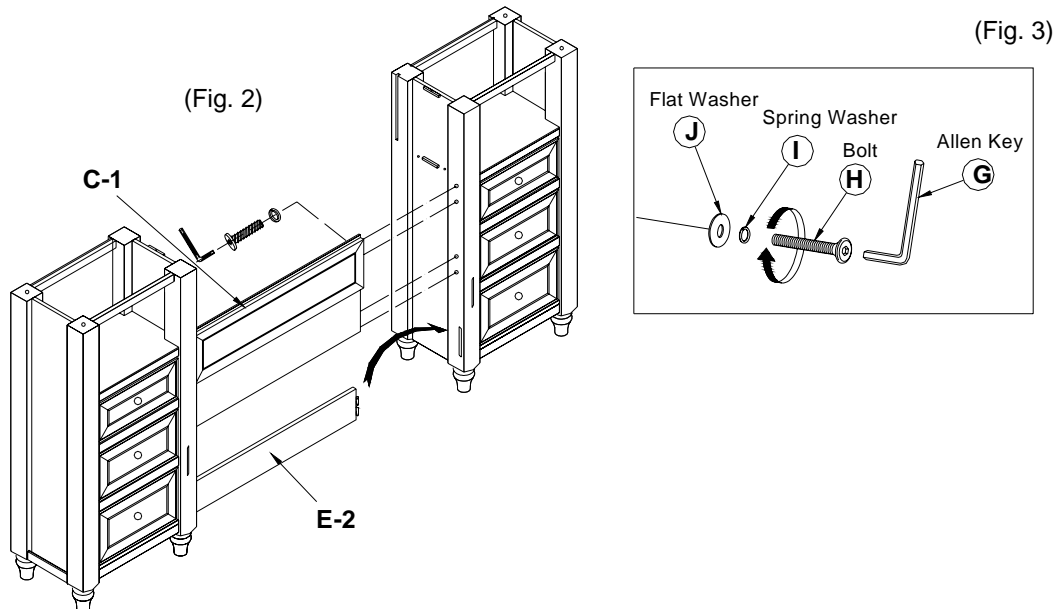


3. Carefully place the Center Shelf (C-2) between the Right & Left Units as shown, and connect using Allen Bolts, Flat Washers, and Spring Washers to secure the center unit. Slide the Back Panel (C-3) into the slots.

(Fig. 4)

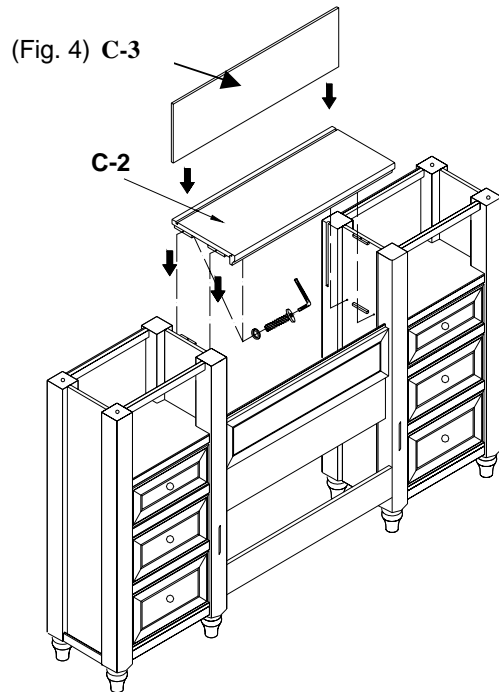


4. Carefully place the Center Top panel (C) on the top of Right & Left Units as shown, and fasten using Wood Screw (K), Flat Washers, and Spring Washers.

(Fig. 5)

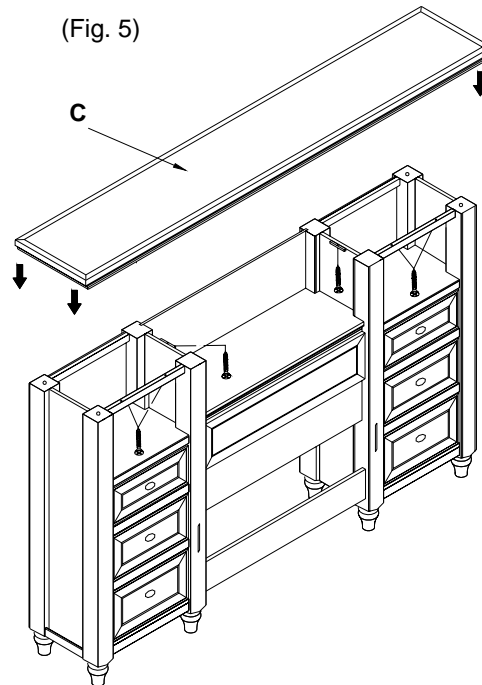


5. Thread the (2) Feet (E-1) and (2) Finials (E-4) into pre-drilled holes on Footboard (E), as shown.

(Fig. 6)

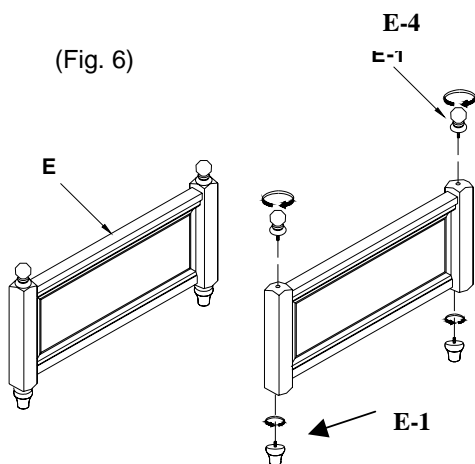


6. Determine the desired location of bed. One person should hold the Footboard (E) in a vertical position tilted slightly forward. Attach each Side rail (D) to the Headboard by inserting the hooked ends of the side rail into the corresponding slots in the headboard, as shown. Be sure the small ledge on each side rail is facing inward. Repeat with Footboard (E).

(Fig. 7)

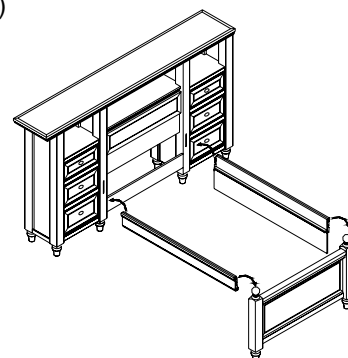


7. Carefully place the 3 Drawer Unit (F) on the side of the side rail as shown. (Fig. 8)

(Fig. 8)

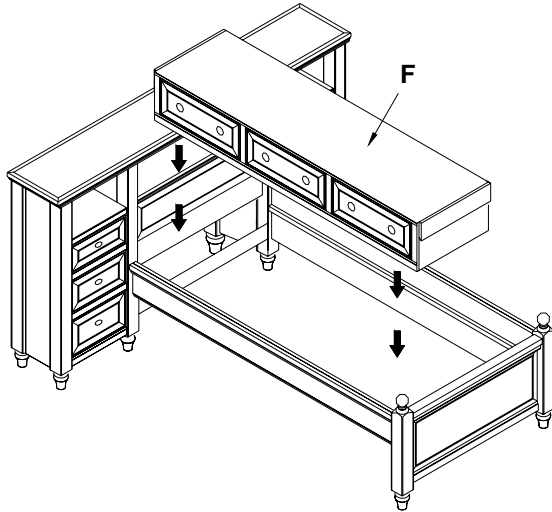

8. Place Slat roll (E-3) on the side rails, using the stoppers on the end of ledge to prevent slat roll from moving. Secure slats with the remaining Wood screws (K) using a Phillips screwdriver. (Fig. 9)

(Fig. 9)

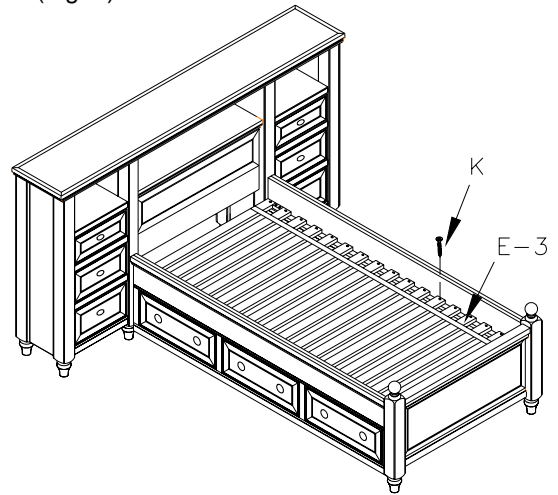

Thank you for your purchase

stores | catalog | www.potterybarnkids.com

1.800.290.8181