

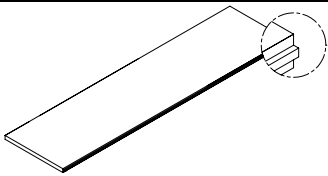
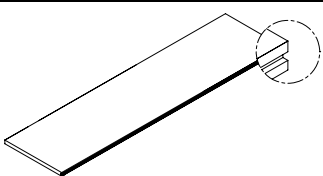
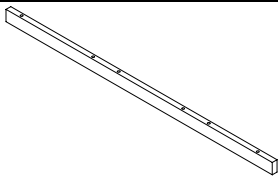
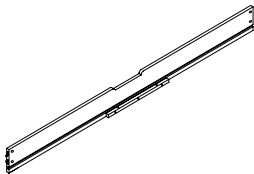

# pottery barn kids

## TRAIN ENGINE TWIN TRUNDLE







### PRE-ASSEMBLY

- Remove all parts and hardware from the box and lay out on a clean, carpeted, or scratch-free work surface. This will avoid damaging any parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists above to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- If using power tools to aid in assembly please use caution. Power tools can damage hardware or split wood.

### PARTS INCLUDED:

(A) Side Bottom Board with Protruding Edge - 2pcs 	(B) Middle Bottom Board with Sunken Edge - 1pc 	(C) Wooden Rail - 2pcs 
(D) Long Side Rail - 2pcs 	(E) Short Side Rail - 2pcs 	

### HARDWARE INCLUDED:

(F) Phillips Head Screw #8x30 mm - 22pcs 	(G) Barrel Nut 6x13x10mm - 8pcs 	(H) Allen Bolt M6 x 60 mm - 8pcs 
(I) Caster 40x60x65mm - 6pcs 	(J) Pan Head Screw #4 x 12 mm - 24pcs 	(K) Allen Key - 1pc 


### TOOLS REQUIRED:

- Screwdriver (Not included)
- Phillips Head Screwdriver (Not included)

## ASSEMBLY:


1. Slot the Middle Bottom Board (B) into the two Side Bottom Boards (A) with the pre-drilled holes on the Side Bottom Boards facing up. Attach the Wooden Rails (C) to the assembly by inserting the wood dowels on the Wooden Rail into the pre-drilled holes on the Side Bottom Boards as shown. Secure the Wooden Rails by using twelve (12) Phillips Head Screws #8x30mm (F) . See Fig. 1.

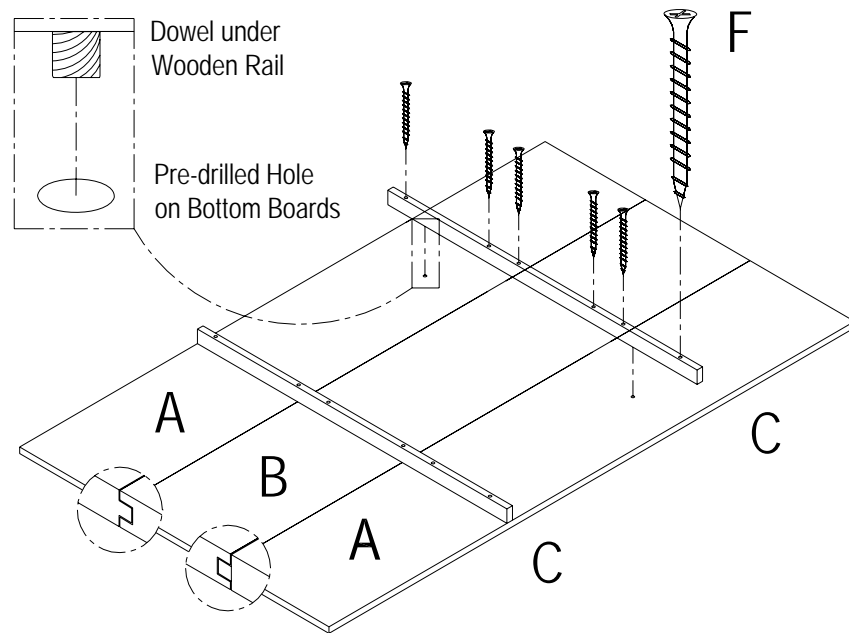Fig. 1




2. Turn the assembled bottom boards over and attach the Long Side Rails (D) and Short Side Rails (E) to bottom boards as shown. Connect rails by using two (2) Barrel Nuts (G) and two (2) Allen Bolts M6x60mm (H) at each corner. Secure Allen Bolts with enclosed Allen Key (K). See Fig 2.

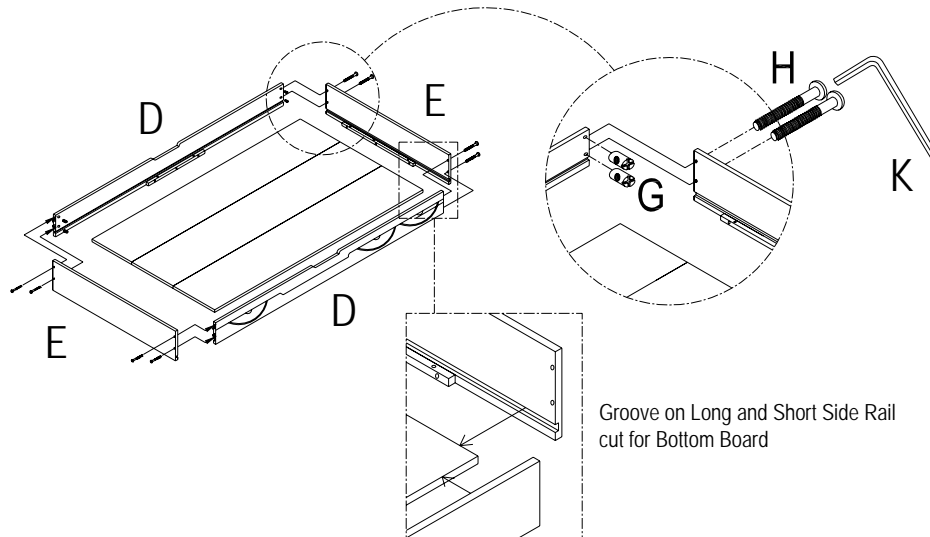Fig. 2




3. Turn assembled box over. Insert the remaining ten (10) Phillips Head Screws #8x30 mm (F) into the pre-drilled holes on the support rails found pre-attached to the Long Side Rails and Short Side Rails as shown. Secure with a Phillips Head Screwdriver. (Fig. 3)
4. Attach the Casters (I) to the bottom four corners of the bottom board using four (4) Pan Head Screw #4x12 mm (J) for each caster. Secure with Screwdriver. See Fig. 3.

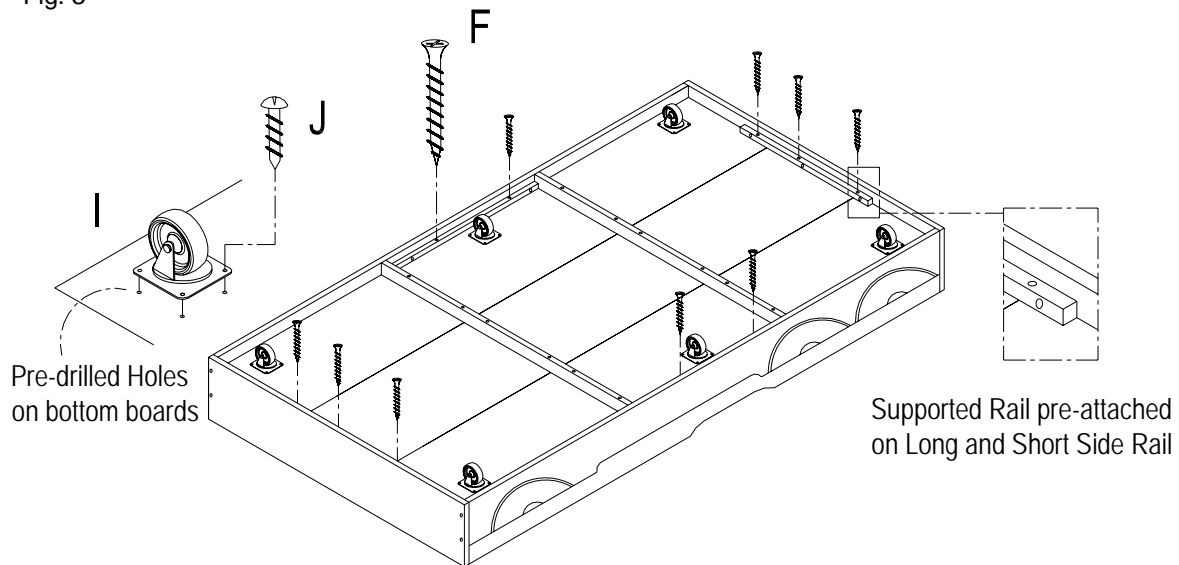Fig. 3



5. Turn the Trundle upright. Align it with the space under the Bed. Slowly move it into the bed, taking care not to scratch the finish. See Fig. 4.

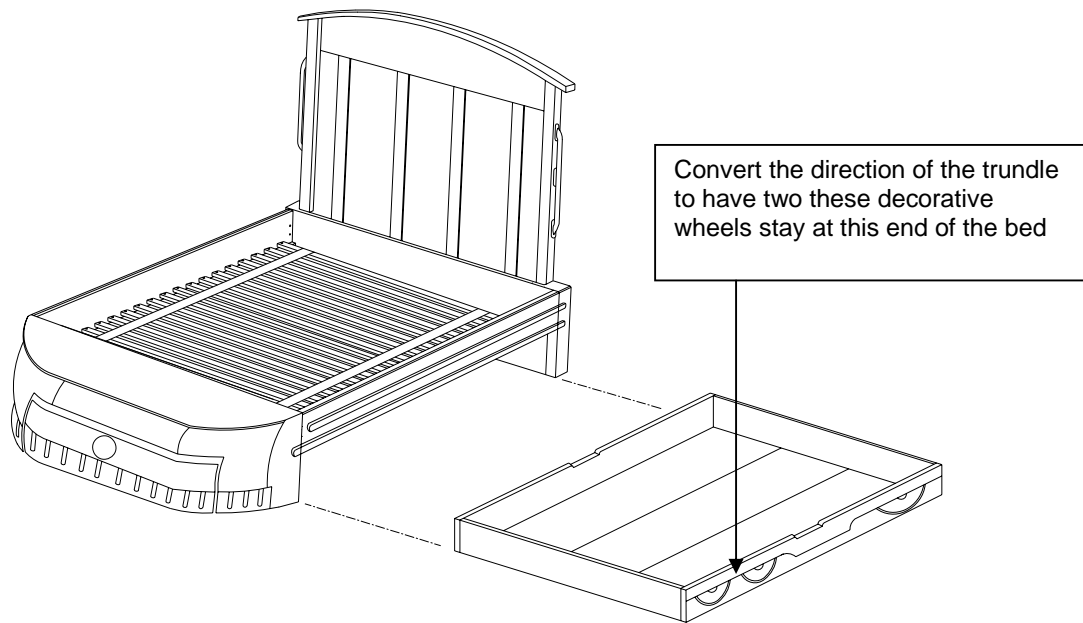Fig. 4



#### CARE INSTRUCTIONS:

- Use a soft dry or slightly damp cloth to clean periodically.
- To protect the finish always avoid the use of chemical and abrasive cleansers.

Thank you for your purchase  
stores | catalog | [www.potterybarnkids.com](http://www.potterybarnkids.com)  
USA 1.800.290.8181