

pottery barn kids

IRON BED AND CANOPY (EACH SOLD SEPARATELY)

CAUTION: This item contains small parts that have sharp points and edges in the unassembled state. Care should be taken when unpacking and assembling this item.
















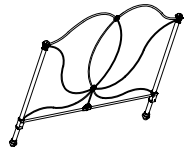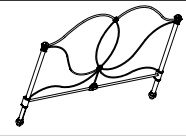


Please read all instructions before beginning assembly.

For ease of assembly two people are recommended.

Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

PARTS INCLUDED:

- (1) Headboard (A)
- (1) Footboard (B)
- (2) Side Rail (C)
- (3) Metal Support Slats (D)
- (2) Short Canopy Post (E) (*For Canopy only*)
- (2) Long Canopy Post (F) (*For Canopy only*)
- (2) Long Stretcher (G) (*For Canopy only*)
- (2) Short Stretcher (H) (*For Canopy only*)
- (4) Finial Base (I)
- (4) Finial (J)
- (18) Bolt Ø1/4"x3/4" #1
- (12) Small Rubber Washer #2
- (1) Allen Wrench #3
- (12) Metal Washer #4
- (6) Nuts #5
- (1) Open Wrench #6
- (8) Large Rubber Washer #7**
- (4 pieces used for bed only)*
- (4) Plug #8 (*For canopy only*)


A		1pcs
B		1pcs
C		2pcs
D		3pcs
E		2pcs
F		2pcs
G		2pcs
H		2pcs
I		4pcs
J		4pcs
①		18pcs
②		12pcs
③		1pcs
④		12pcs
⑤		6pcs
⑥		1pcs
⑦		8pcs
⑧		4pcs

ASSEMBLY:

Assembly of the side rails and bed frame:


Step#1

1. Attach Headboard (A) to Side Rail (C) using (6) Bolts #1 placed through (6) Small Rubber Washers #2 tighten using Allen Wrench #3.
2. Attach Footboard (A) to Side Rail (C) using (6) Bolts #1 Through (6) Small Rubber Washers #2. Tighten with Allen Wrench #3.

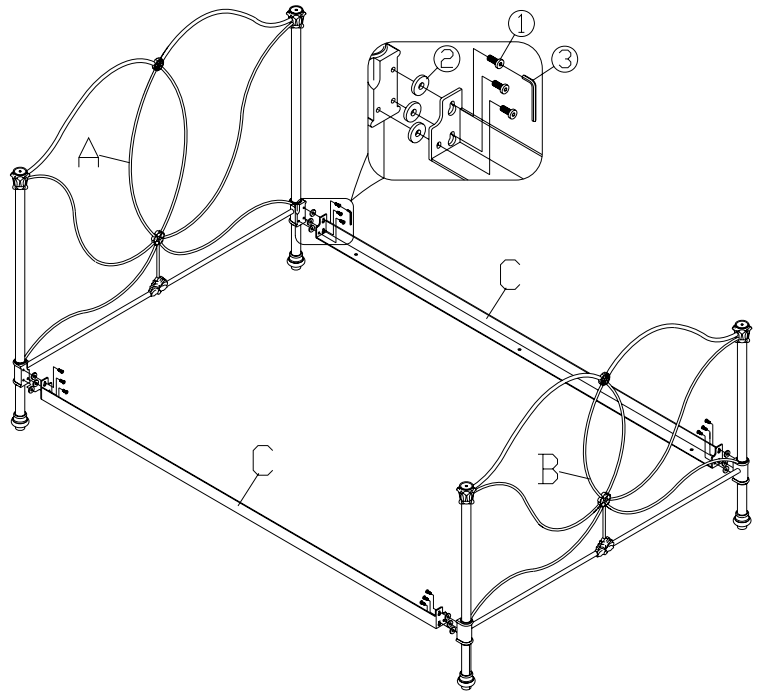

Step #2


Attach Side Rail (C) and Metal Support Slats (D). Secure in place with (6) Bolts #1, (12) Metal Washer #4 (both above and below the slat as shown) Complete with (6) Nuts #5 tighten using both Open Wrench #6 and Allen Wrench #3.

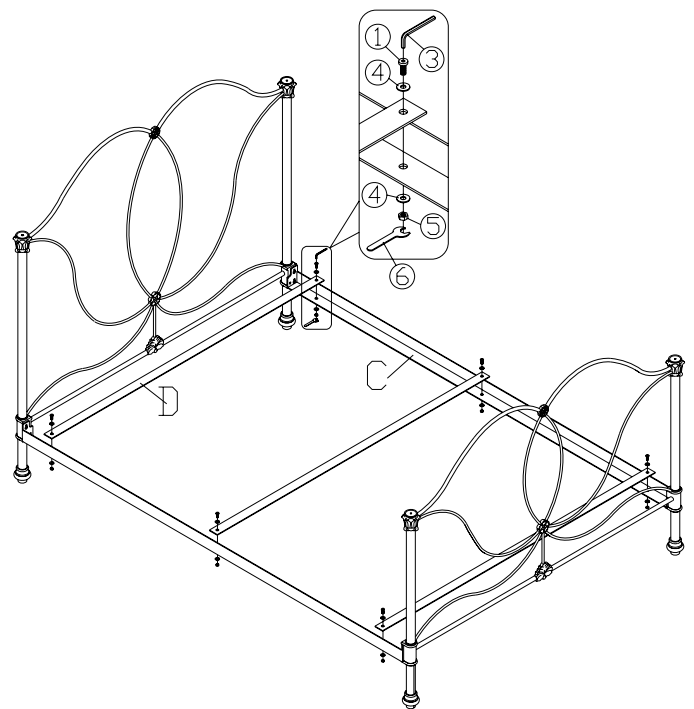

To complete bed *without* canopy:

Step #3


Insert (4) Finials (E) through
(4) Large Rubber Washers #7
into top of Headboard (A).

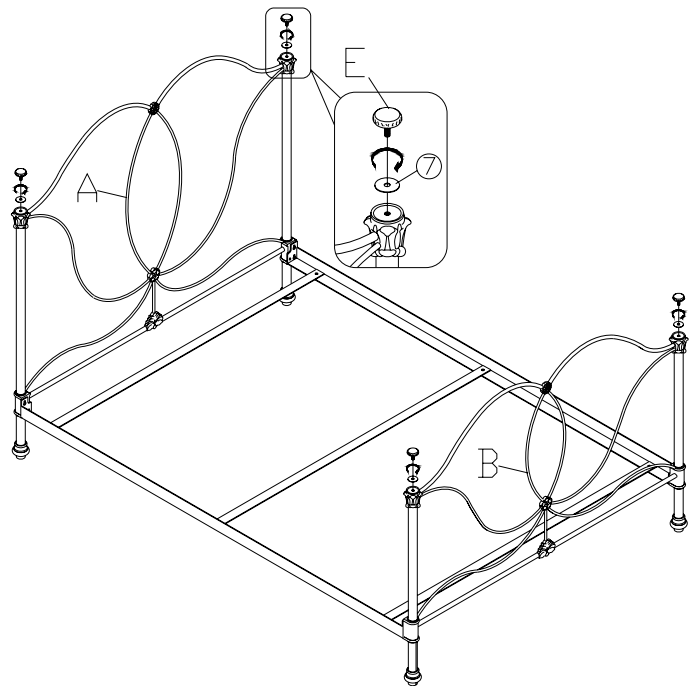

To complete bed *with* canopy:


Step #3

Insert (2) Short Canopy Posts (E)
Through (2) Large Rubber
Washers #7 into the
Headboard (A). Insert (2) Long
Canopy Posts (F) with (2) Large
Rubber Washer #7 into the
Footboard (B).

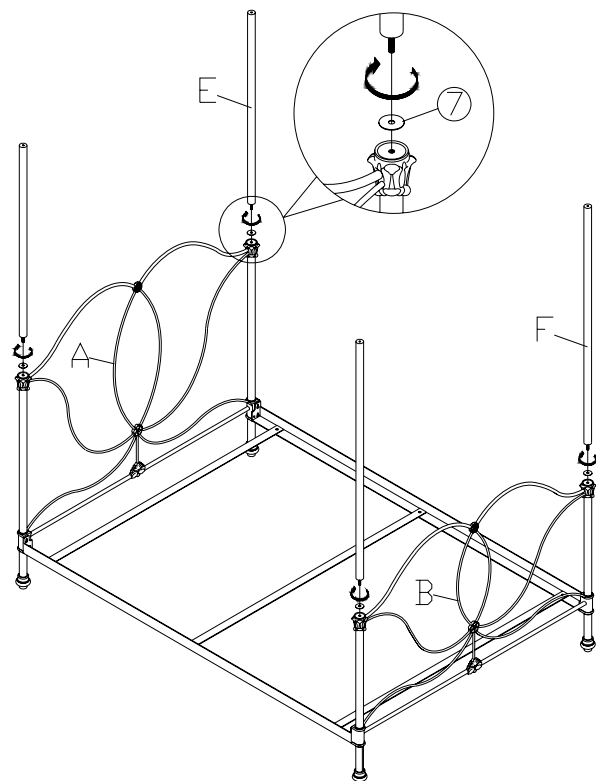

Step #4

Insert Finals (J) into top of Finial Base (I). Insert Finial Base (I) through Large Rubber Washer #7 into both the top of Short Canopy Post (E) and Long Canopy Post (F) as shown. Pay attention to the two holes on the Finial Bases (I) they should be facing toward the other holes on the other Finial Bases.

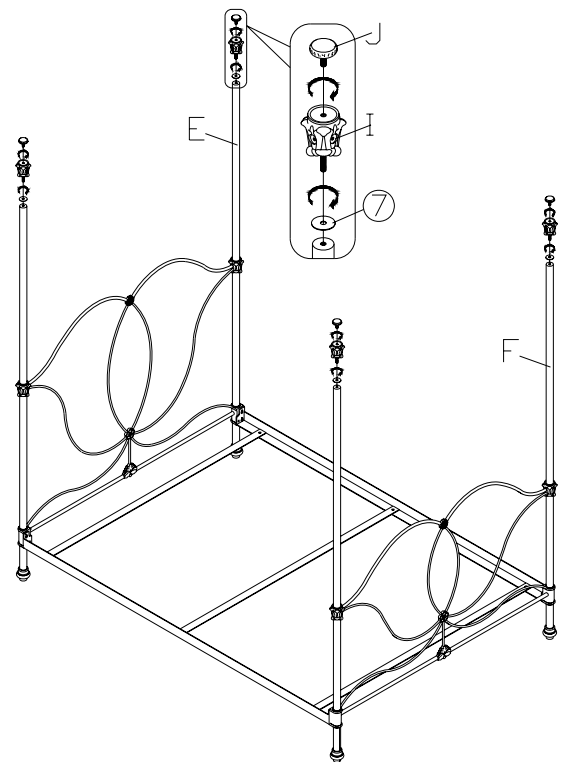


Step #5

Insert Plugs #8 into the right hole of each Finial Base (I).

Attach Short Stretchers (H) between the Headboard and Footboard posts as shown.

Attach Long Stretcher (G)
Between the Headboard and
Footboard as shown

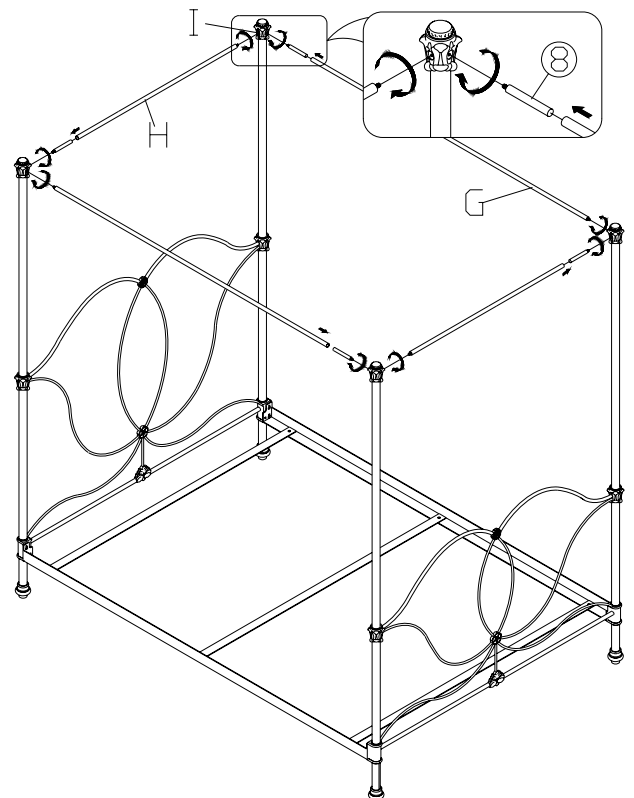

Care Instructions:

Dust with a soft, dry or slightly damp cloth. Avoid the use of cleaners and polishes.

Thank you for your purchase.

stores | catalog | www.potterybarnkids.com